

Tratament chimic: CONSUM RIDICAT, ZGOMOT, AVARII REPETATE EXTERIOR SCHIMBATOARE CENTRALE MURALE IN CONDENSARE



CHIMIA
INSTALATIEI
TERMICE


Probleme tratate: OXIZI

Materiale: ALUMINIU

CLEANEX OXI A



Pulverizati si lasati sa
actioneze 5-15min

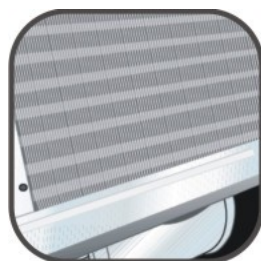


Clatiti cu apa
din abundenta

CLEANEX OXI B



Pulverizati si lasati sa
actioneze 2-5min

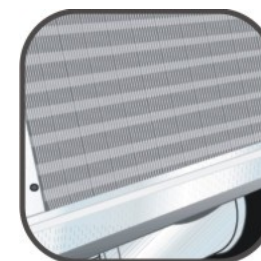


Clatiti cu apa
din abundenta

Materiale: INOX

CLEANEX OXI B



Pulverizati si lasati sa
actioneze 5-15min

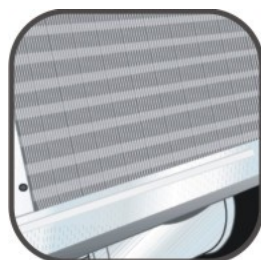


Clatiti cu apa
din abundenta

CLEANEX OXI A



Pulverizati si lasati sa
actioneze 2-5min

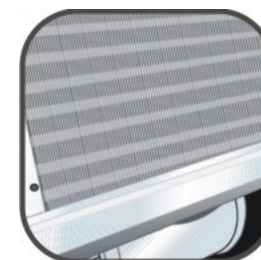

Clatiti cu apa
din abundenta