

# Tratament chimic: CONSUM RIDICAT, ZGOMOT, AVARII REPETATE EXTERIOR SCHIMBATOARE CENTRALE MURALE IN CONDENSARE



CHIMIA  
INSTALATIEI  
TERMICE

**Probleme tratate: OXIZI**

**Materiale: ALUMINIU**

**CLEANEX OXI A**



Pulverizati si lasati sa  
actioneze 5-15min




Clatiti cu apa  
din abundenta

**CLEANEX OXI B**



Pulverizati si lasati sa  
actioneze 2-5min

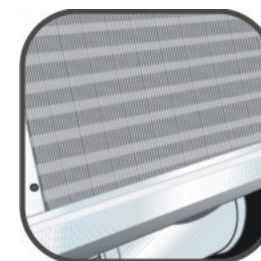


Clatiti cu apa  
din abundenta

**Materiale: INOX**

**CLEANEX OXI B**



Pulverizati si lasati sa  
actioneze 5-15min

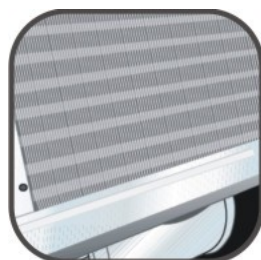


Clatiti cu apa  
din abundenta

**CLEANEX OXI A**



Pulverizati si lasati sa  
actioneze 2-5min

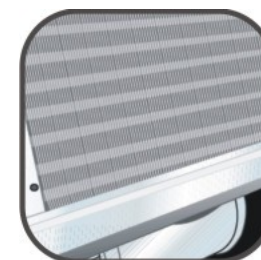

Clatiti cu apa  
din abundenta